

ASSEMBLY INSTRUCTION

UNDERLAY BED


Important

Please inspect all items carefully before assembling.

If for any reason you need to return this
Item, you must return it in its original packaging.
Assembled items cannot be returned.

IMPORTANT NOTE: * PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE
SUCH AS A RUG OR CARPET TO AVOID THE PARTS
FROM BEING SCRATCHED.

- * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY
SET-UP.

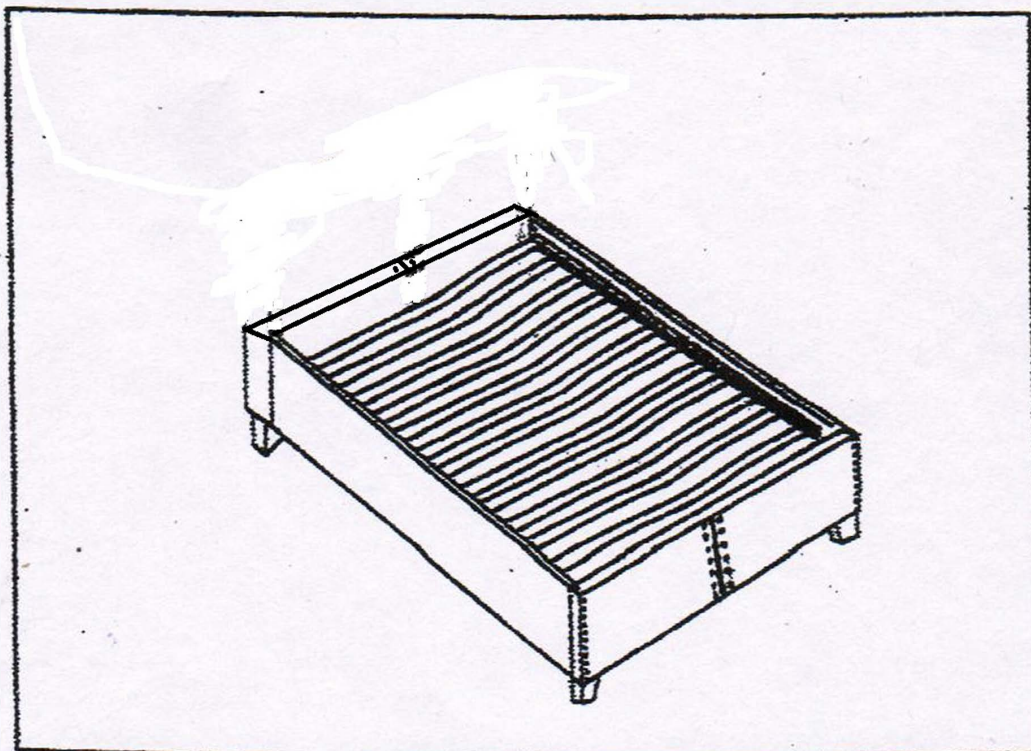

PART LIST

① Headboard 1pc



② Footboard 1pc



③ Slats x12pcs



④ Side Rail x 2pcs



⑤ Single Plastic Cap x24pcs



⑥ Leg x 4pcs



HARDWARE LIST

(A) Bolt M8 x 38mm x 8pcs

(B) Bolt M8 x 50mm x 4pcs



(C) Flat Washer x12pcs

(D) Spring Washer x 8pcs



(E) Allen Key M5 x 1pc



(I) Bolt M6x45mmx2pcs

(J) Nut M6x2pcs



(K) Flat Washer x2pcs


(L) Allen Key M6x1pc




(M) Metal Tie-rod x1pc




STEP 1 FIXING LEGS TO HEADBOARD AND FOOTBOARD

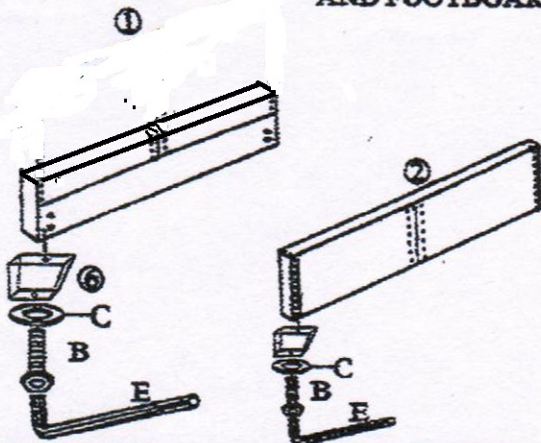

STEP 2 FIXING SIDE RAILS TO HEADBOARD AND FOOTBOARD

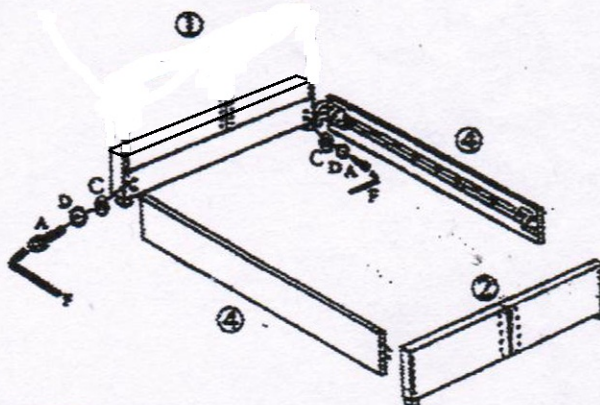

STEP 3 ONCE SLAT ASSEMBLED POSITION PEGS ON THE BASE OF CAPS INTO CORRESPONDING HOLES ON THE SIDE RAILS THEN CAREFULLY PRESS DOWN ON CAPS TO SECURE

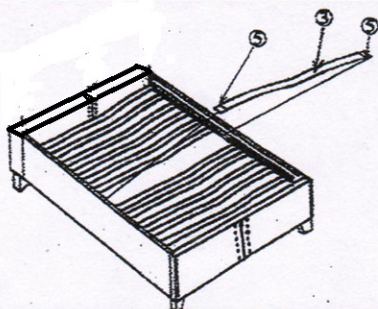

STEP 6 ATTACH THE METAL TIE-ROD (N) IN THE CENTRE OF THE BED INTO PRE-DRILLED HOLES IN THE SLAT SUPPORTS, SCREWING ROD TO SUPPORTS WITH I, J, K & L ONCE ROD IS FIXED IN POSITION, STICK RUBBER PAD (M) TO TOP OF THE METAL CENTRE SUPPORT, DIRECTLY UNDER THE TIE-ROD SO THERE IS NO CONTACT BETWEEN SUPPORT & ROD.

