


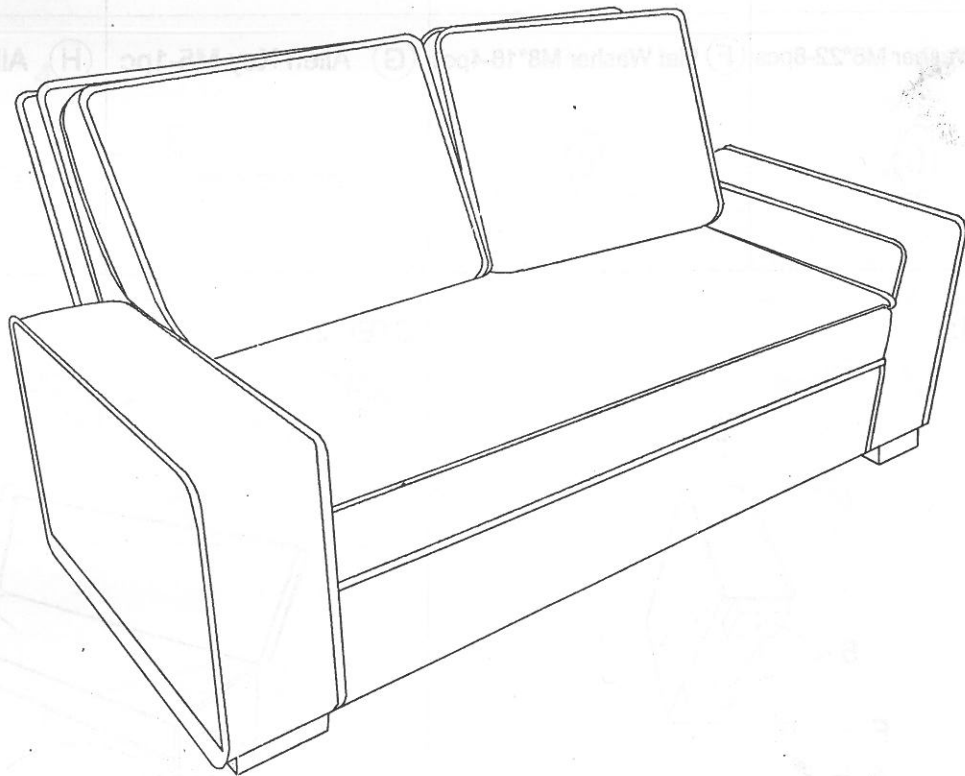














# ASSEMBLY INSTRUCTION




# PARTS LIST:

<p>① -1pc</p> 	<p>② -2pcs</p> 	<p>③ -4pcs</p> 	<p>④ -2pcs</p> 
<p>⑤ 1pc</p> 	<p>⑥ - 4pcs</p> 	<p>⑦ -2pcs</p> 	


# HARDWARE LIST:

<p>Ⓐ Bolt M8*60mm-4pcs</p> 	<p>Ⓑ Bolt M8*45mm-8pcs</p> 	<p>Ⓒ Bolt M6*15mm-4pcs</p> 	<p>Ⓓ Bolt M6*10mm-8pcs</p> 
<p>Ⓔ Flat Washer M8*22-8pcs</p> 	<p>Ⓕ Flat Washer M8*16-4pcs</p> 	<p>Ⓖ Allen Key M5-1pc</p> 	<p>Ⓗ Allen Key M4-1pc</p> 


STEP 1:

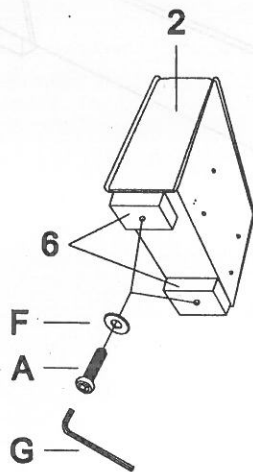


STEP 2:

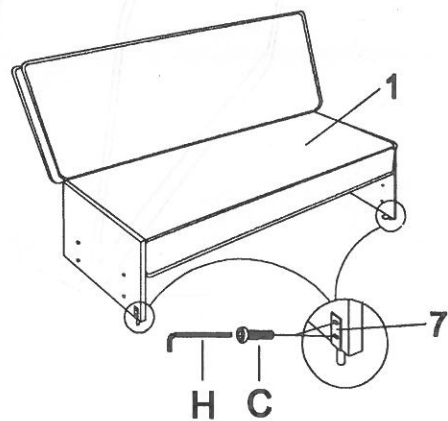


**STEP 3:**

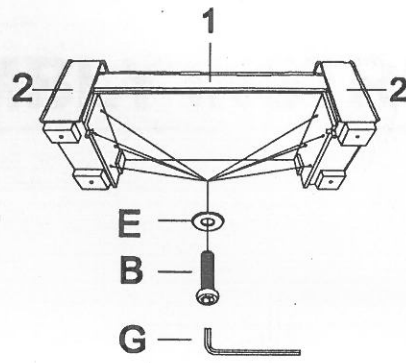

**STEP 4:**

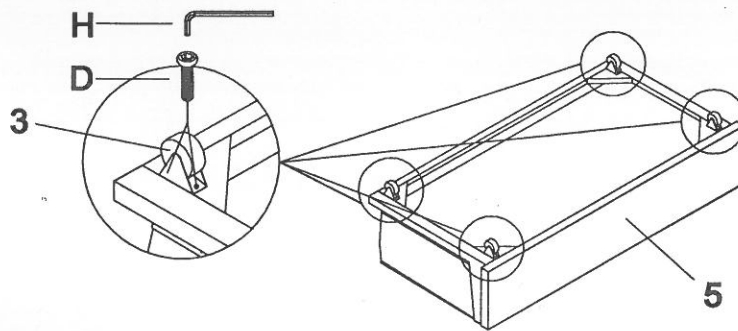

**STEP 5:**

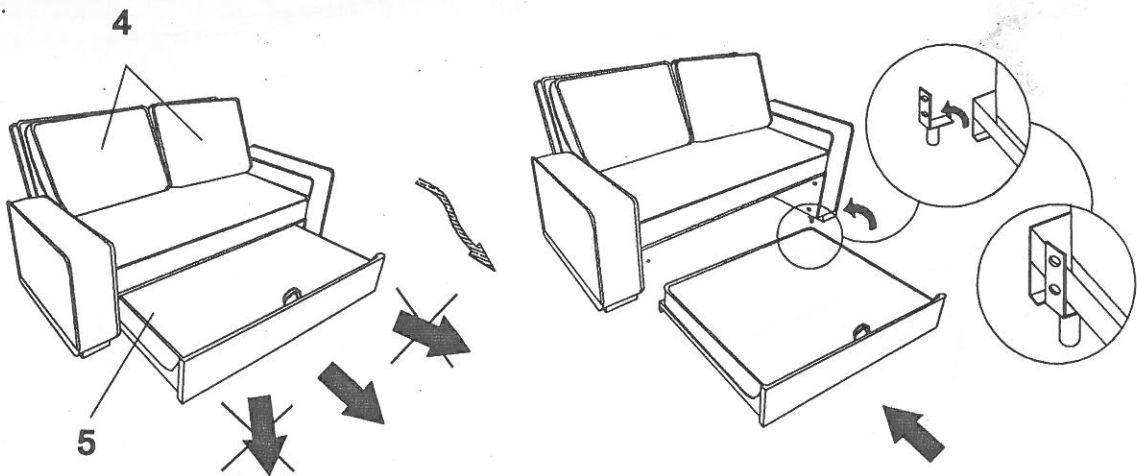

**STEP 6:**

