

ASSEMBLY INSTRUCTION

Important


Please inspect all items carefully before assembling.

**If for any reason you need to return this
Item, you must return it in its original packaging.**

Assembled items cannot be returned.

**IMPORTANT NOTE: • PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE
SUCH AS A RUG OR CARPET TO AVOID THE PARTS
FROM BEING SCRATCHED.**

- KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- DO NOT TIGHTEN ALL SCREWS UNTIL THE BED IS FULLY
SET-UP.**

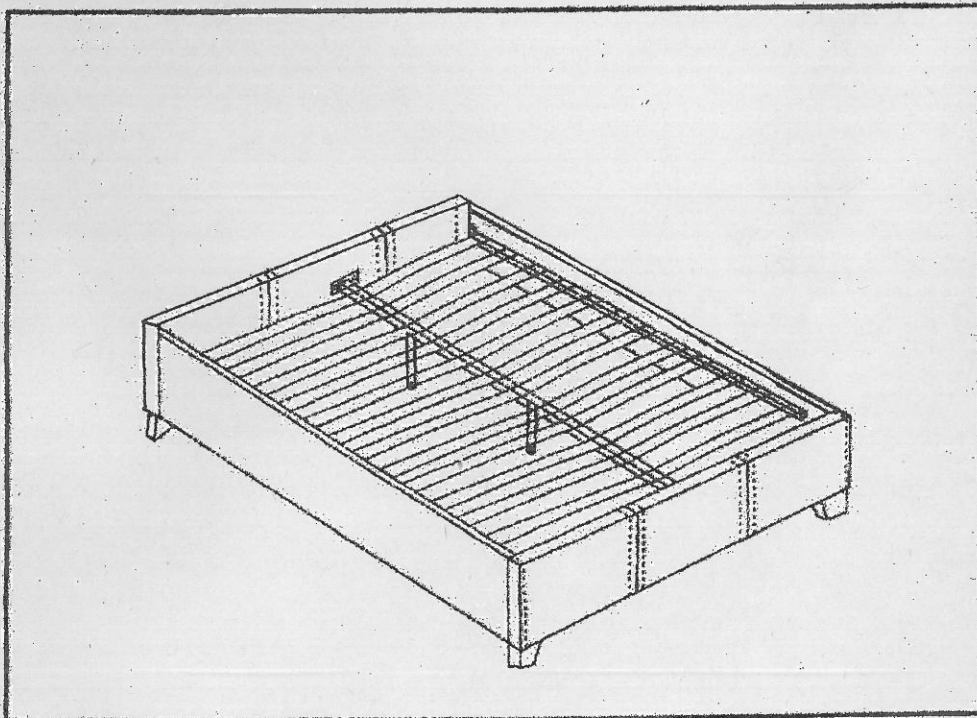


PART LIST

① Headboard 1pc



② Footboard 1pc

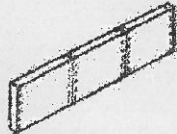

③ Support Leg x 2pcs




④ Side Rail x 2pcs



⑤ Centre Support Bar x 1pc



⑥ Slats x 26pcs




⑦ Double Plastic Cap x 13pcs



⑧ Single Plastic Cap x 26pcs



⑨ Leg x 4pcs



HARDWARE LIST

(A) Bolt M8 x 30mm x 12pcs (B) Bolt M8 x 35mm x 4pcs



(C) Nut M8 x 13mm x 4pcs

(D) Spring Washer x 8pcs



(E) Flat Washer x 12pcs

(F) Allen Key M5 x 1pc



(G) Spanner x 1pc

(H) Bolt M8 x 50mm x 4pcs



(I) Bolt M6 x 45mm x 2pcs

(J) Nut M6 x 2pcs



(K) Flat Washer x 2pcs

(L) Allen Key M6 x 1pc




(M) Metal Tie-rod x 1pc




STEP 1 FIXING LEGS TO HEADBOARD AND FOOTBOARD


①

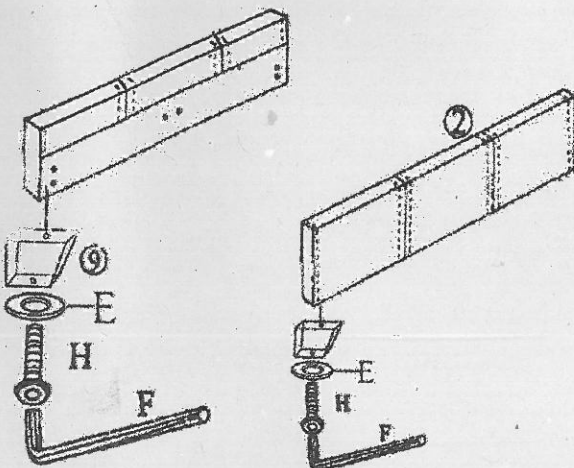


STEP 2 FIXING SUPPORT LEGS TO CENTRE SUPPORT BAR

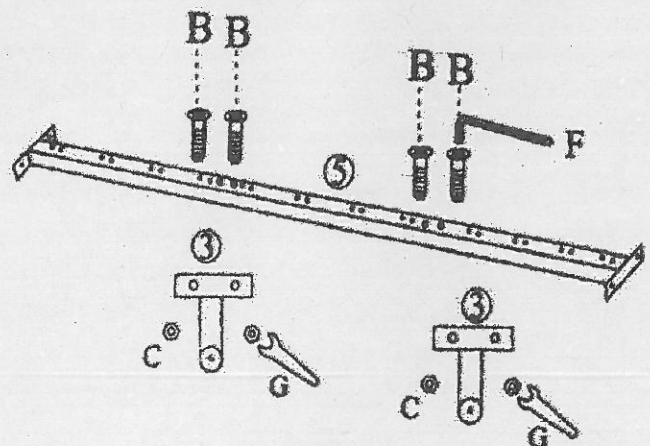

STEP 3 FIXING SIDE RAILS AND CENTRE SUPPORT BAR TO HEADBOARD AND FOOTBOARD

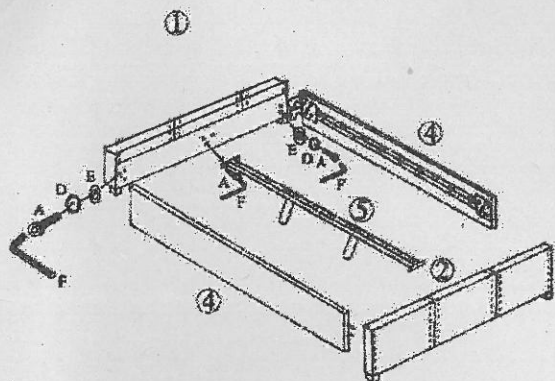

STEP 4 ONCE SLAT ASSEMBLED POSITION PEGS ON THE BASE OF CAPS INTO CORRESPONDING HOLES ON THE SIDE RAILS AND CENTRAL SUPPORT BAR THEN CAREFULLY PRESS DOWN ON CAPS TO SECURE

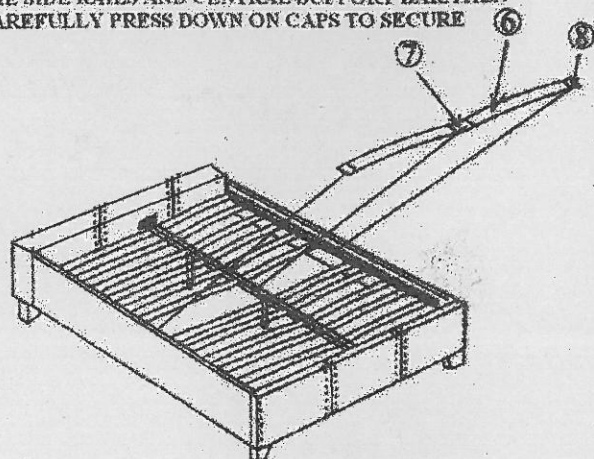

STEP 5 ATTACH THE METAL TIE-ROD (N) IN THE CENTRE OF THE BED INTO PRE-DRILLED HOLES IN THE SLAT SUPPORTS, SCREWING ROD TO SUPPORTS WITH I, J, K & L ONCE ROD IS FIXED IN POSITION, STICK RUBBER PAD (M) TO TOP OF THE METAL CENTRE SUPPORT, DIRECTLY UNDER THE TIE-ROD SO THERE IS NO CONTACT BETWEEN SUPPORT & ROD.

